

Free-Standing Gas Ranges

NSTALLATION, USE AND CARE



Please Ensure that your cooktop is installed by a qualified technician according to GE's installation guidelines. This helps to avoid any issues related to gas or electrical connections.

Always turn the burners on after placing the cookware on the burner.

Clean the grates, burner caps, and the surrounding area regularly to prevent the buildup of grease and food particles.

Use heat-resistant utensils that are safe for use with your cooktop. Avoid using plastic utensils on hot surfaces as they can melt.



Use ONLY gas regulators authorized by the TRINIDAD AND TOBAGO BUREAU OF STANDARDS.

Use a Voltage Protector: Protect your unit and warranty by using a voltage protector.





Please avoid using cookware that is too heavy or large, as it can be unstable and may scratch the surface.

Do not leave cookware unattended on high heat, as this can cause the cookware to overheat, potentially leading to a fire or damage to the cooktop.

Make sure the gas burners are properly aligned and securely placed. If you detect a gas smell, turn off the gas supply immediately and contact a professional to inspect the cooktop.

Keep flammable items, such as paper towels, dishcloths, or food packaging, away from the cooktop while in use.

Do not use the cooktop as a storage area when it is not in use. Accidentally turning on a burner with items on top can lead to a fire.

For Residential use ONLY:

Using this unit other than for Residential use VOIDS all warranties.

Please read the Manual. Familiarize yourself with your manual. Not only does it cover, basic operational use. You can maximize the use of your machine by learning its features.

PLEASE ENSURE all of the above guidelines are taken into consideration before making a service complaint. It may be a fault of the unit; it may be an improper installation or a user issue. Both are not covered by warranty and you would have to pay a fee.

Repairs by an unauthorized technician VOIDS your WARRANTY.



Electric Gas Ranges INSTALLATION, USE AND CARE



Please ensure The Power Supply Meets Electrical Standards. The electrical supply for gas ranges is 110-12V/60Hz or for electric stoves 220v / 60Hz both must be correctly grounded.

Please ensure You Preheat your oven: If you think the oven is not perform in gas it should, check the type of baking-ware that you are using vs recommended temperature settings and which level rack you are using.

Protect your unit and warranty by using a voltage protector.





Please DO NOT USE harsh/abrasive or ammonia based cleaning products. Keep igniter and burners clean. Filth/grease as ebuild-up affects a stove's performance.

Use correct cookware. Use correct cookware for electric stoves. Rounded bottom pots are pans, like cast-iron pots, are not made for Electric stoves.

DO NOT USE an extension cord.

For Residential use ONLY:

Using this unit other than for Residential use VOIDS all warranties.

Please read the Manual. Familiarize yourself with your manual. Not only does it cover, basic operational use. You can maximize the use of your machine by learning its features.

PLEASE ENSURE all of the above guidelines are taken into consideration before making a service complaint. It may be a fault of the unit; it may be an improper installation or a user issue. Both are not covered by warranty and you would have to pay a fee.

Repairs by an unauthorized technician VOIDS your WARRANTY.

