



INSTALLATION, USE AND CARE



Ensure that your wall oven is **installed by a qualified technician** according to GE's installation guidelines. **Proper installation** is crucial for safety and optimal performance.

Preheating the Oven: Always preheat the oven to the recommended temperature before placing food inside. This ensures even cooking and accurate baking times.

Set the **desired temperature and cooking mode** using the control panel.

Self-Cleaning Function: If your wall oven has a self-cleaning feature, follow the manufacturer's instructions carefully. Remove any large food debris before starting the cycle, and ensure the area is well-ventilated during cleaning.



**VOLTAGE
PROTECTOR**

Please read the Manual. Familiarize yourself with your manual. Not only does it cover, basic operational use. You can maximize the use of your machine by learning its features.

PLEASE ENSURE all of the above guidelines are taken into consideration before making a service complaint. It may be a fault of the unit; it may be an improper installation or a user issue. **Both are not covered by warranty and you would have to pay a fee.**

Repairs by an unauthorized technician VOIDS your WARRANTY.

www.geappliances.com



Avoid Overloading: Do not overload the oven with multiple dishes at once, as this can impede airflow and result in uneven cooking. Space out dishes to allow heat to circulate freely.

Using the Right Cookware: Use oven-safe cookware that can withstand high temperatures. **Avoid using glass or ceramic dishes** unless they are specifically labeled as oven-safe.

Keep flammable items away from the oven while it is in use.

Avoid storing items in the oven, especially when it's not in use.

Use oven mitts or pot holders when handling hot cookware to prevent burns. **Do not use commercial oven cleaners or protective coatings in a self-cleaning oven.**

For Residential use ONLY:

Using this unit other than for Residential use **VOIDS** all warranties.

